


1. Strip HP Converter Cabling to expose shielding and middle cable.
2. Solder shielding to black wire.
3. Solder middle wire to red wire.
4. Refer to P13321-DOC-ASSMW for detailed cable assembly instructions.

Side Views

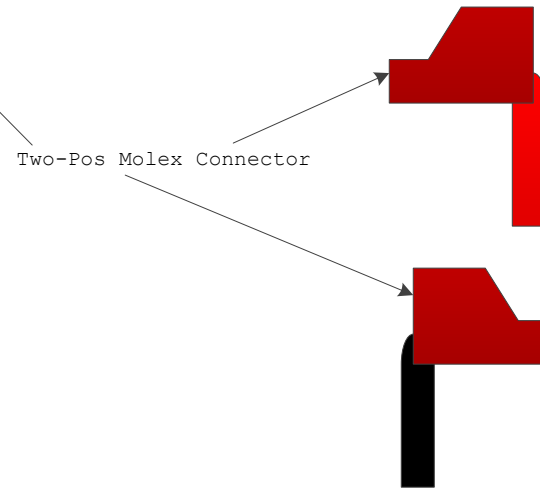

| Description | # | Part Number | Supplier |
|--------------------------------|-----|-------------|-----------------|
| 2-pos Molex Connector (Female) | 2 | 640440-2 | Molex |
| HP 19V 4.7A ACDC Converter | 1 | 394224-101 | Hewlett-Packard |
| Wire (Black) | 20" | 22AWG | RIT EE Dept |
| Wire (Red) | 20" | 22AWG | RIT EE Dept |

| | | | |
|---------|------------------------|------------------|---|
| TITLE: | Main Board Power Cable | REV: | 1 |
| AUTHOR: | Kevin Fronczak | P13321-DRW-MCPCV | |