


1. Take wire located at top of solenoid and wrap around exposed red wire. Solder.
2. Take wire located at bottom of solenoid and wrap around exposed black wire. Solder.
3. Refer to P13321-DOC-ASSMW for more detailed solenoid cable construction instructions.

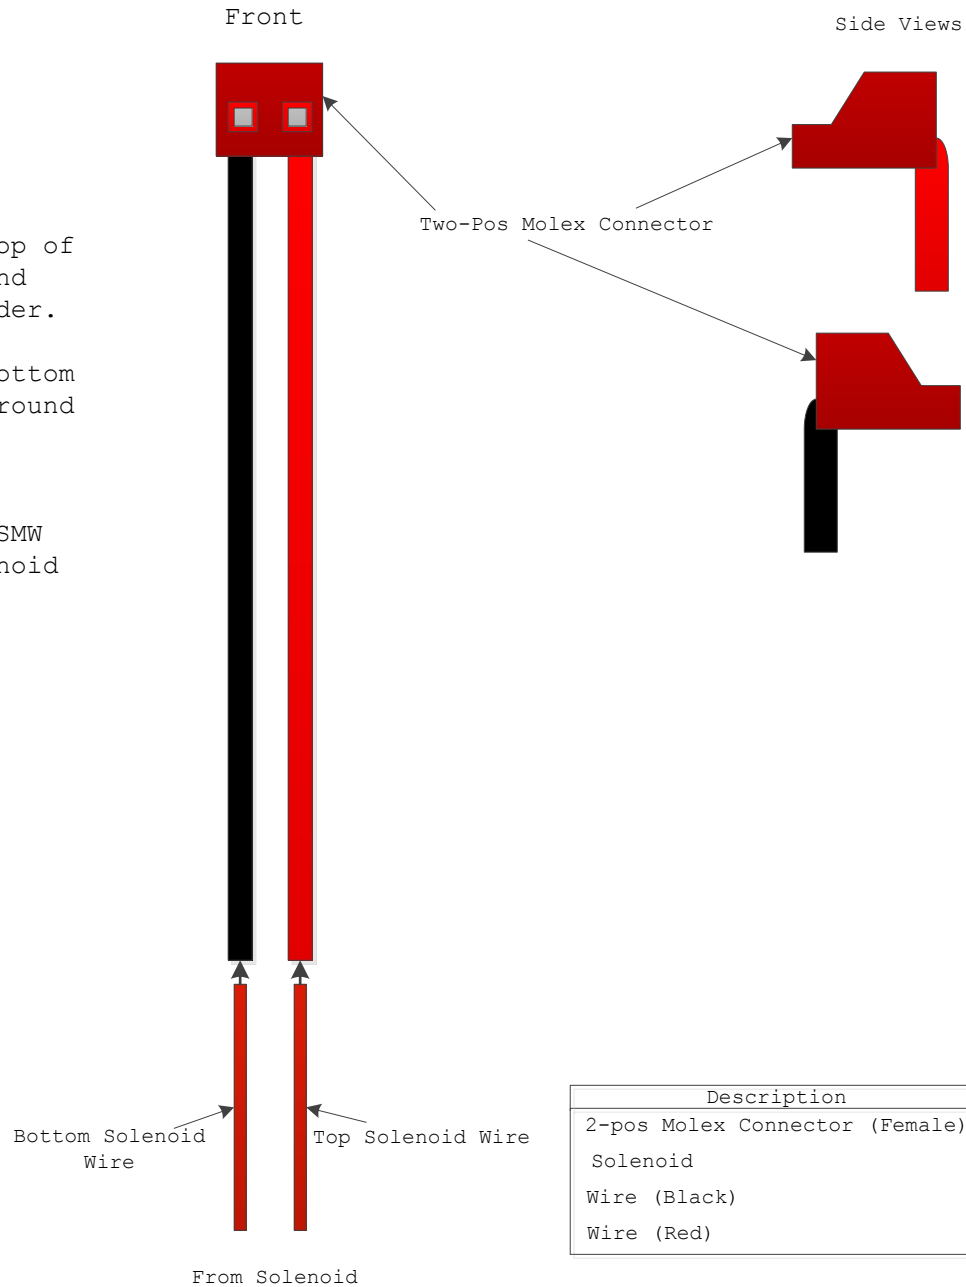

Description	#	Part Number	Supplier
2-pos Molex Connector (Female)	2	640440-2	Molex
Solenoid	1	P13321-DRW-SLNDV	P13321
Wire (Black)	20"	22AWG	RIT EE Dept
Wire (Red)	20"	22AWG	RIT EE Dept

TITLE: Solenoid Cable	REV: 1
AUTHOR: Kevin Fronczak	P13321-DRW-SOLCV